


**RVAR-LR/SR**

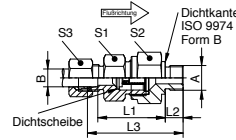


Rückschlagventil, Flußrichtung vom Rohr zum Einschraubgewinde, Gewinde BSPP mit Dichtkante Form B, leichte + schwere Reihe Verschraubungsstutzen  
 Non-return valve, flow direction from pipe to male stud, male thread BSPP with sealing edge from B, light and heavy duty series Body only

| Reihe | A      | B  | PN / bar | L1 / mm | L2 / mm | L3 / mm | S1 | S2 | S3 | Art.Nr.    |
|-------|--------|----|----------|---------|---------|---------|----|----|----|------------|
| L     | G1/8   | 06 | 315      | 39.0    | 8.0     | 56.0    | 17 | 17 | 14 | RVAR06LR01 |
| L     | G1/4   | 08 | 315      | 42.0    | 12.0    | 59.0    | 19 | 19 | 17 | RVAR08LR02 |
| L     | G1/4   | 10 | 315      | 54.0    | 12.0    | 72.0    | 22 | 24 | 19 | RVAR10LR02 |
| L     | G3/8   | 12 | 315      | 57.0    | 12.0    | 75.0    | 27 | 30 | 22 | RVAR12LR03 |
| L     | G1/2   | 15 | 315      | 61.0    | 14.0    | 79.0    | 27 | 32 | 27 | RVAR15LR04 |
| L     | G1/2   | 18 | 315      | 62.0    | 14.0    | 81.5    | 36 | 36 | 32 | RVAR18LR04 |
| L     | G3/4   | 22 | 160      | 68.5    | 16.0    | 88.0    | 41 | 46 | 36 | RVAR22LR06 |
| L     | G1     | 28 | 160      | 84.5    | 18.0    | 106.0   | 50 | 50 | 41 | RVAR28LR08 |
| L     | G1 1/4 | 35 | 160      | 90.0    | 20.0    | 116.5   | 60 | 60 | 50 | RVAR35LR10 |
| L     | G1 1/2 | 42 | 160      | 90.0    | 22.0    | 117.0   | 65 | 70 | 60 | RVAR42LR12 |
| S     | G1/4   | 06 | 630      | 42.0    | 12.0    | 59.0    | 19 | 19 | 17 | RVAR06SR02 |
| S     | G1/4   | 08 | 630      | 43.0    | 12.0    | 60.0    | 19 | 19 | 19 | RVAR08SR02 |
| S     | G3/8   | 10 | 630      | 49.5    | 12.0    | 69.0    | 24 | 24 | 22 | RVAR10SR03 |
| S     | G3/8   | 12 | 630      | 56.5    | 12.0    | 76.0    | 27 | 30 | 24 | RVAR12SR03 |
| S     | G1/2   | 14 | 630      | 57.0    | 14.0    | 77.0    | 27 | 32 | 27 | RVAR14SR04 |
| S     | G1/2   | 16 | 400      | 56.5    | 14.0    | 78.0    | 32 | 36 | 30 | RVAR16SR04 |
| S     | G3/4   | 20 | 400      | 72.5    | 16.0    | 98.0    | 41 | 46 | 36 | RVAR20SR06 |
| S     | G1     | 25 | 400      | 68.0    | 18.0    | 96.0    | 46 | 50 | 46 | RVAR25SR08 |
| S     | G1 1/4 | 30 | 400      | 88.5    | 20.0    | 118.0   | 60 | 60 | 50 | RVAR30SR10 |
| S     | G1 1/2 | 38 | 250      | 101.0   | 22.0    | 136.0   | 65 | 70 | 60 | RVAR38SR12 |

| Art.Nr.     |
|-------------|
| XRVAR06LR01 |
| XRVAR08LR02 |
| XRVAR10LR02 |
| XRVAR12LR03 |
| XRVAR15LR04 |
| XRVAR18LR04 |
| XRVAR22LR06 |
| XRVAR28LR08 |
| XRVAR35LR10 |
| XRVAR42LR12 |
| XRVAR06SR02 |
| XRVAR08SR02 |
| XRVAR10SR03 |
| XRVAR12SR03 |
| XRVAR14SR04 |
| XRVAR16SR04 |
| XRVAR20SR06 |
| XRVAR25SR08 |
| XRVAR30SR10 |
| XRVAR38SR12 |

**RVER-LR/SR**

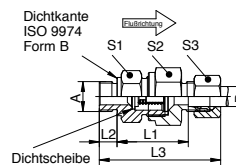

Rückschlagventil, Flußrichtung vom Einschraubgewinde zum Rohr, Gewinde BSPP mit Dichtkante Form B, leichte + schwere Reihe Verschraubungsstutzen  
 Non-return valve, flow direction from male stud to pipe, male thread BSPP with sealing edge form B, light and heavy duty series Body only

| Reihe | A      | B  | PN / bar | L1 / mm | L2 / mm | L3 / mm | S1 | S2 | S3 | Art.Nr.    |
|-------|--------|----|----------|---------|---------|---------|----|----|----|------------|
| L     | G1/8   | 06 | 315      | 45.0    | 8.0     | 62.0    | 14 | 17 | 14 | RVER06LR01 |
| L     | G1/4   | 08 | 315      | 41.0    | 12.0    | 58.0    | 17 | 19 | 17 | RVER08LR02 |
| L     | G1/4   | 10 | 315      | 53.0    | 12.0    | 70.0    | 22 | 24 | 19 | RVER10LR02 |
| L     | G3/8   | 12 | 315      | 56.0    | 12.0    | 74.0    | 27 | 30 | 22 | RVER12LR03 |
| L     | G1/2   | 15 | 315      | 54.0    | 14.0    | 72.0    | 27 | 30 | 27 | RVER15LR04 |
| L     | G1/2   | 18 | 315      | 59.5    | 14.0    | 79.0    | 32 | 36 | 32 | RVER18LR04 |
| L     | G3/4   | 22 | 160      | 62.5    | 16.0    | 82.0    | 36 | 46 | 36 | RVER22LR06 |
| L     | G1     | 28 | 160      | 82.5    | 18.0    | 104.0   | 41 | 55 | 41 | RVER28LR08 |
| L     | G1 1/4 | 35 | 160      | 89.5    | 20.0    | 116.0   | 50 | 60 | 50 | RVER35LR10 |
| L     | G1 1/2 | 42 | 160      | 89.0    | 22.0    | 116.0   | 60 | 70 | 60 | RVER42LR12 |
| S     | G1/4   | 06 | 630      | 49.0    | 12.0    | 66.0    | 17 | 19 | 17 | RVER06SR02 |
| S     | G1/4   | 08 | 630      | 53.0    | 12.0    | 70.0    | 19 | 19 | 19 | RVER08SR02 |
| S     | G3/8   | 10 | 630      | 58.5    | 12.0    | 77.0    | 22 | 24 | 22 | RVER10SR03 |
| S     | G3/8   | 12 | 630      | 63.5    | 12.0    | 83.0    | 27 | 30 | 24 | RVER12SR03 |
| S     | G1/2   | 14 | 630      | 66.0    | 14.0    | 86.0    | 27 | 32 | 27 | RVER14SR04 |
| S     | G1/2   | 16 | 400      | 67.5    | 14.0    | 89.0    | 30 | 36 | 30 | RVER16SR04 |
| S     | G3/4   | 20 | 400      | 81.5    | 16.0    | 107.0   | 36 | 46 | 36 | RVER20SR06 |
| S     | G1     | 25 | 400      | 84.0    | 18.0    | 112.0   | 46 | 50 | 46 | RVER25SR08 |
| S     | G1 1/4 | 30 | 400      | 103.5   | 20.0    | 133.0   | 60 | 60 | 50 | RVER30SR10 |
| S     | G1 1/2 | 38 | 250      | 84.0    | 22.0    | 119.0   | 60 | 70 | 60 | RVER38SR12 |

| Art.Nr.     |
|-------------|
| XRVER06LR01 |
| XRVER08LR02 |
| XRVER10LR02 |
| XRVER12LR03 |
| XRVER15LR04 |
| XRVER18LR04 |
| XRVER22LR06 |
| XRVER28LR08 |
| XRVER35LR10 |
| XRVER42LR12 |
| XRVER06SR02 |
| XRVER08SR02 |
| XRVER10SR03 |
| XRVER12SR03 |
| XRVER14SR04 |
| XRVER16SR04 |
| XRVER20SR06 |
| XRVER25SR08 |
| XRVER30SR10 |
| XRVER38SR12 |